


UPGRADE HEAVY-EQUIPMENT HVAC RECIRCULATION FILTRATION

Greatly improve the air quality inside the operator cab with Sy-Klone's new high-efficiency air conditioning panel filters for recirculation. Combine with Sy-Klone's RESPA® fresh air quality system to achieve even better air quality.

Designed for specific make and model machines, each kit includes a high-efficiency panel filter and mounting hardware.

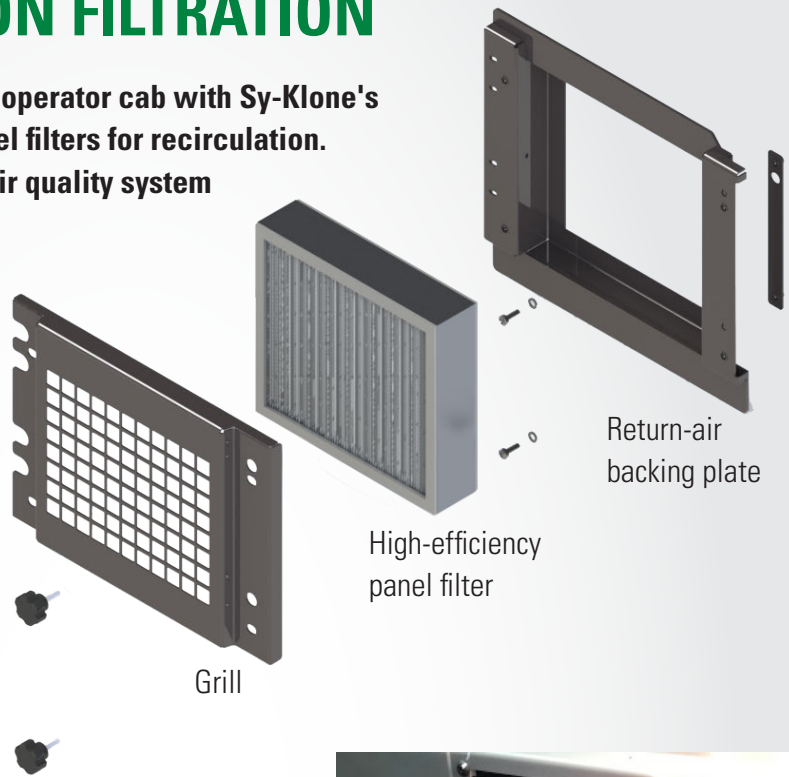

BEFORE



STEP 1

ONE-TIME BRACKET INSTALLATION:

1. Remove factory HVAC recirculation filter, filter frame, and plastic guard. Discard or recycle.
2. Apply a suitable bonding agent, such as sealant, to back of new return-air backing plate and fix into place. Use masking tape to hold plate in place until sealant sets.
3. When sealant has set, remove masking tape and fit filter and grill in place using the supplied fasteners. Make sure foam side of panel filter rests against return-air backing plate. *See kit page for machine-specific installation diagram.*
4. Ensure all bolts are in place, completely secured, in order to prevent air from bypassing the filter.



AFTER

Done! In the future, only the filter needs to be changed.

High-Efficiency HVAC Recirculation Filter Kit

PF716

**OEM EQUIPMENT FIT: KOMATSU HAUL TRUCK
MODEL: 830/960e - 2/4 model cabins**

(KIT CONTAINS NUMBER OF ADAPTERS AND FILTERS REQUIRED FOR MODEL)

REPLACEMENT FILTER PART NUMBER: PF006

FILTER DIMENSIONS: 16.0 x 7.0 x 1.9 in (407 x 177 x 49 mm)

FEATURES:

- Significantly higher efficiency than factory filter, providing improved air quality.
- When combined with RESPA® fresh air systems, provides superior fresh and recirculated cab air quality and reduces wear on HVAC system.


KIT INCLUDES:

- Fasteners
- Grill
- PF006 high-efficiency panel filter
- Return-air backing plate

NOTE: Extra bolt holes are provided for mounting other equipment, such as radios. If not needed, fill with provided bolts.



Return-air backing plate

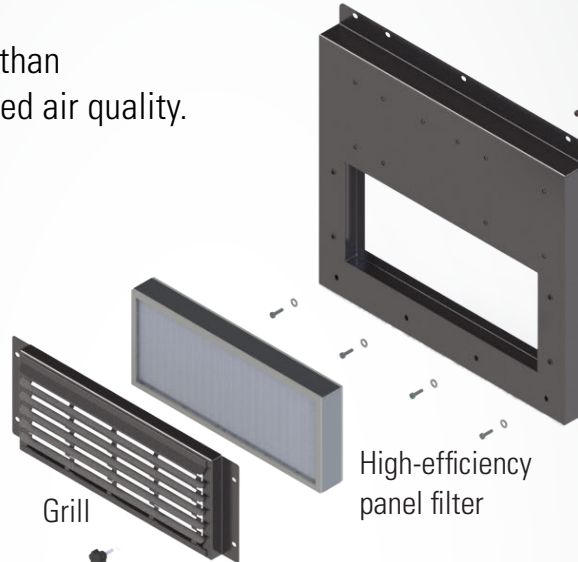

Grill

High-efficiency panel filter

ALSO NEEDED FOR INSTALLATION (NOT INCLUDED IN KIT):

- Sealant/bonding agent
- Masking tape
- Phillips screwdriver, hand tools

COMPLETED INSTALLATION

